

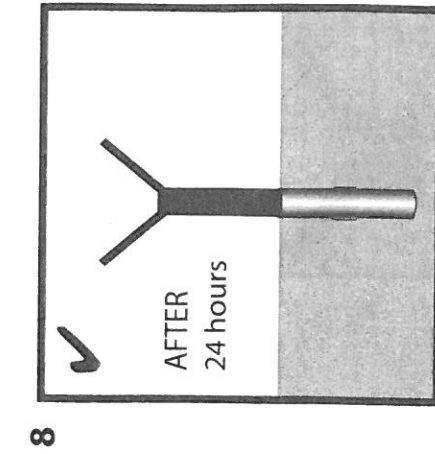
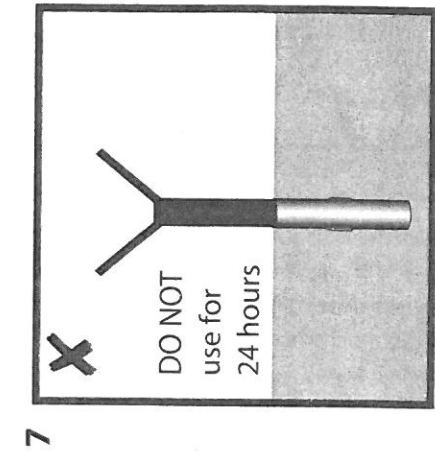
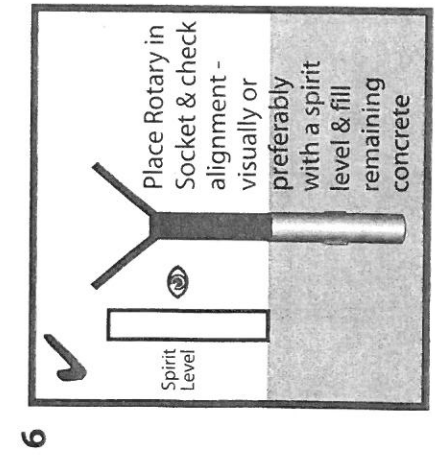
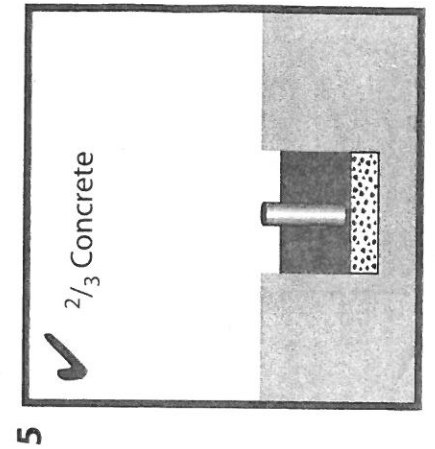
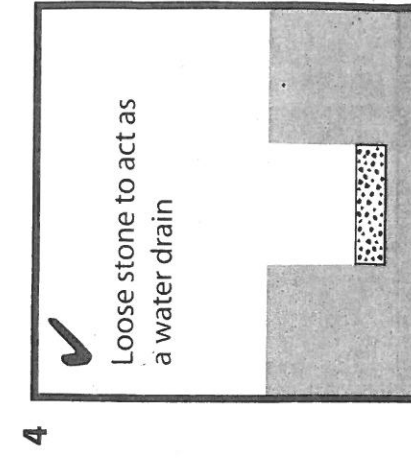
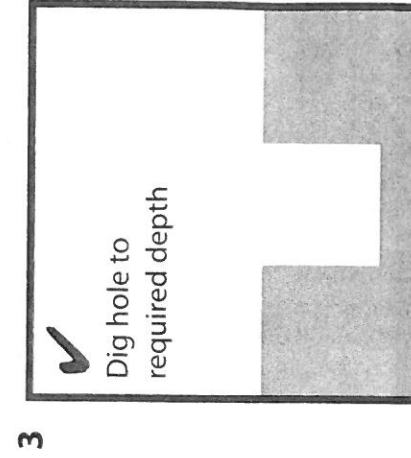
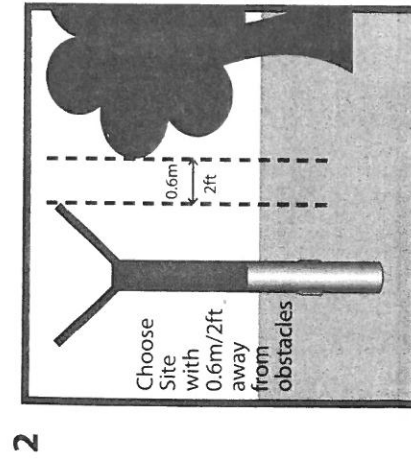








Installation Guidelines for Rotary Drier

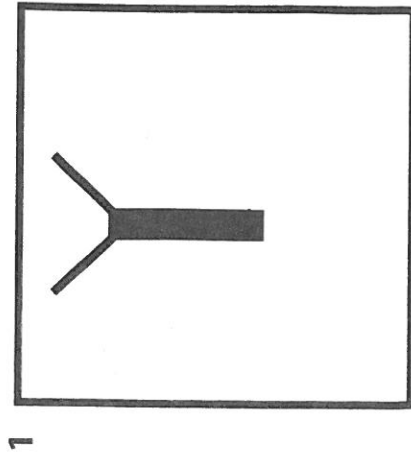

Installation Guidelines for Rotary Aired Ground Spike




Crushed Spike

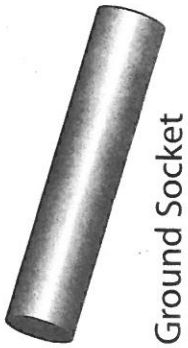

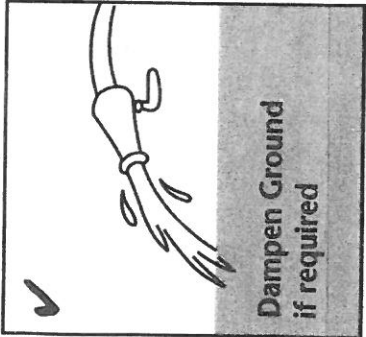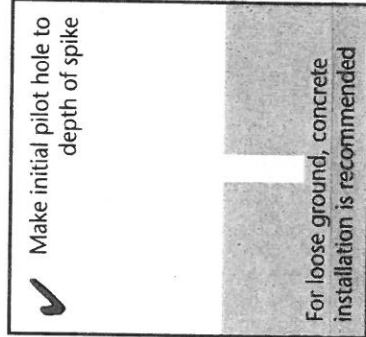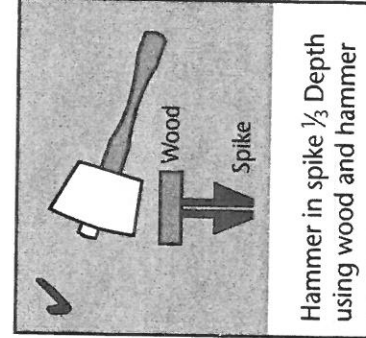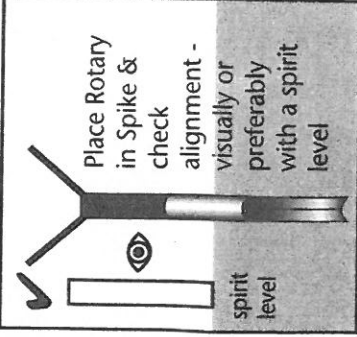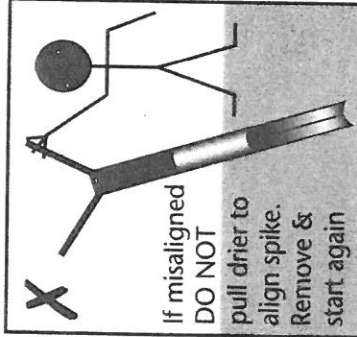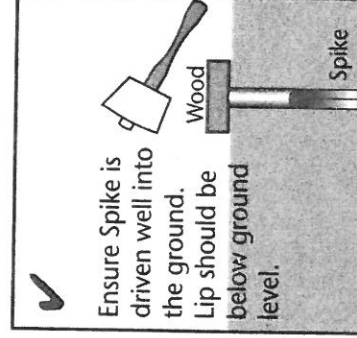- 1  **Dampen Ground if required**
- 2  **Make initial pilot hole to depth of spike**
For loose ground, concrete installation is recommended
- 3  **Hammer in spike 1/3 Depth using wood and hammer**
- 4  **Place Rotary in Spike & check alignment - visually or preferably with a spirit level**
- 5  **If misaligned DO NOT pull drier to align spike. Remove & start again**
- 6  **Ensure Spike is driven well into the ground. Lip should be below ground level.**

USER GUIDELINES FOR ROTARY DRIER

Component No. 109355
Artwork Ref. ISS/A

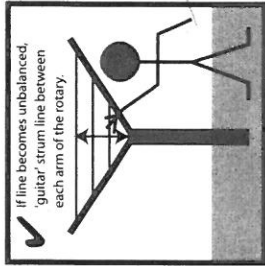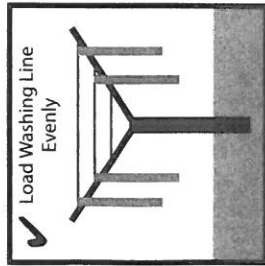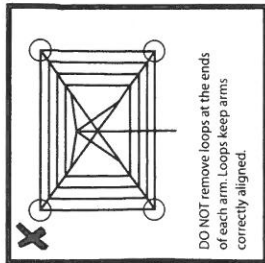

FOLD AND REMOVE AFTER USE




STORE SAFELY OUT OF THE REACH OF CHILDREN
CHILDREN SHOULD NOT PLAY WITH THIS PRODUCT
THIS DRYER IS **NOT** A CHILDREN'S TOY

850/0258 (5 years guarantee against frame failure due to rust, against a dated proof of purchase)


850/0502 (4 years guarantee against frame failure due to rust, against a dated proof of purchase)

850/0416 (4 years guarantee against frame failure due to rust, against a dated proof of purchase)




**Customer Helpline
0845 7697356**

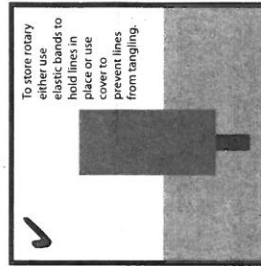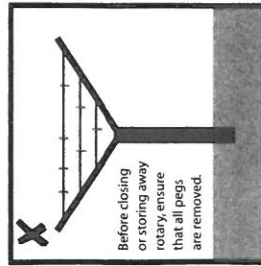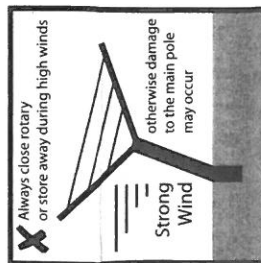

MECHANISM

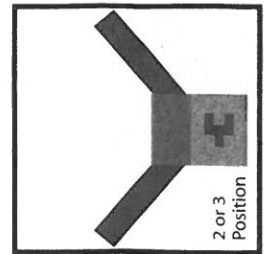

OPERATING

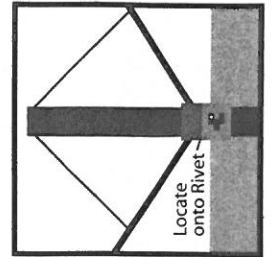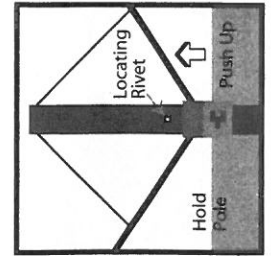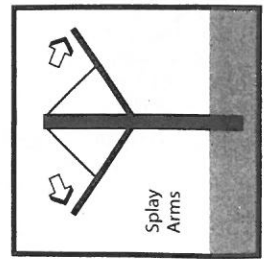

TENSIONING

